


900211 INSTALLATION INSTRUCTIONS

900211-10: PIM Shield Threaded Rod Kit, 3/8" x 6" Lg (Sold in packages of 10)

STEP 1

Attach Threaded Rod to 900209-10: PIM Shield Cable Support Base (sold separately).

(Refer to instructions included with 900209-10 for this step)

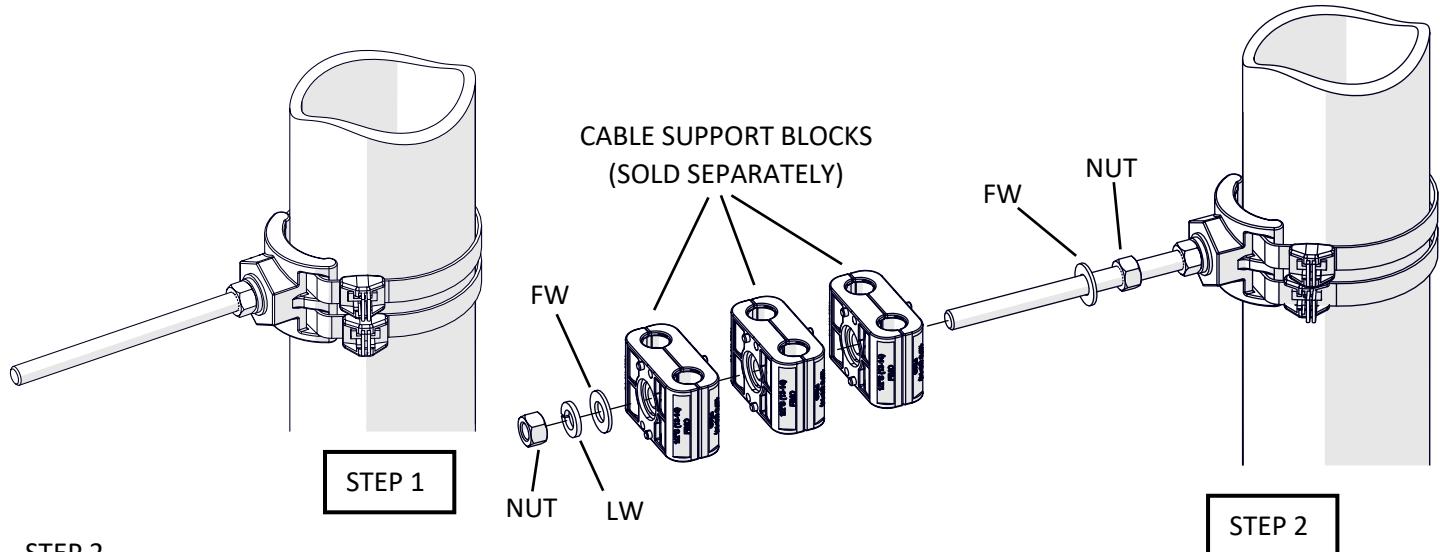

STEP 2

Install Nut and Washers, then attach Cable Support Block(s) (sold separately) with hardware as shown.
(Torque hardware to 10 Ft-lb, ConcealFab Tool PN: 900053) (Note: Spare washer supplied with kit)

900211 INSTALLATION INSTRUCTIONS


900211-10: PIM Shield Threaded Rod Kit, 3/8" x 6" Lg (Sold in packages of 10)

June 2022

STEP 1

Attach Threaded Rod to 900209-10: PIM Shield Cable Support Base (sold separately).

(Refer to instructions included with 900209-10 for this step)

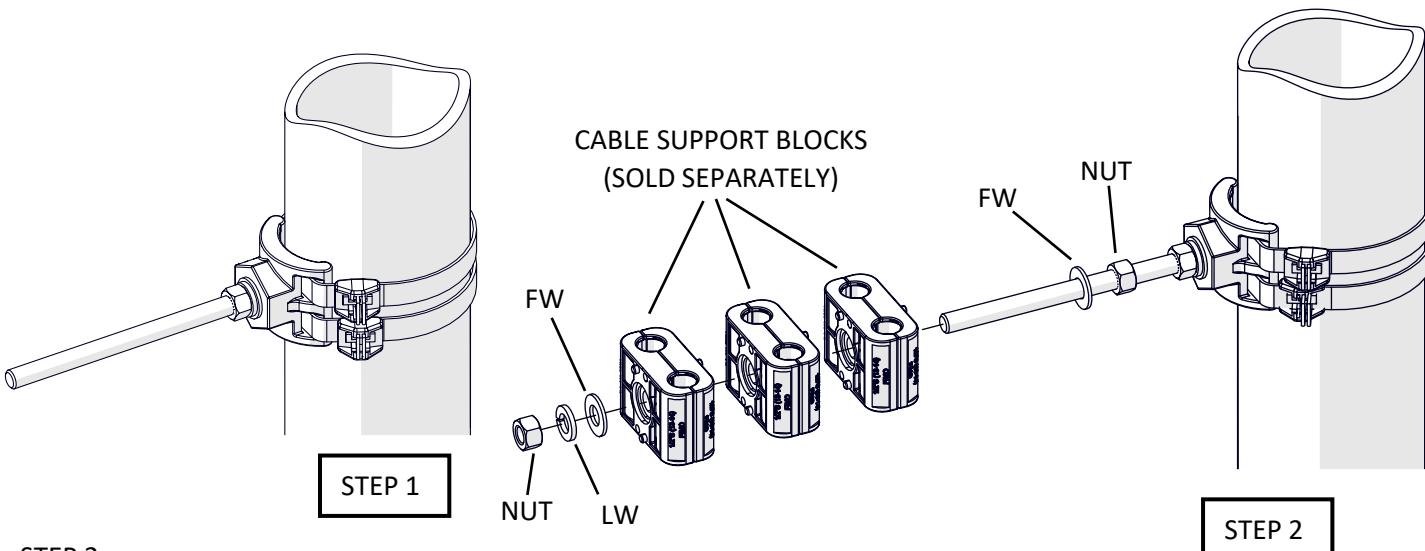

STEP 2

Install Nut and Washers, then attach Cable Support Block(s) (sold separately) with hardware as shown.
(Torque hardware to 10 Ft-lb, ConcealFab Tool PN: 900053) (Note: Spare washer supplied with kit)