

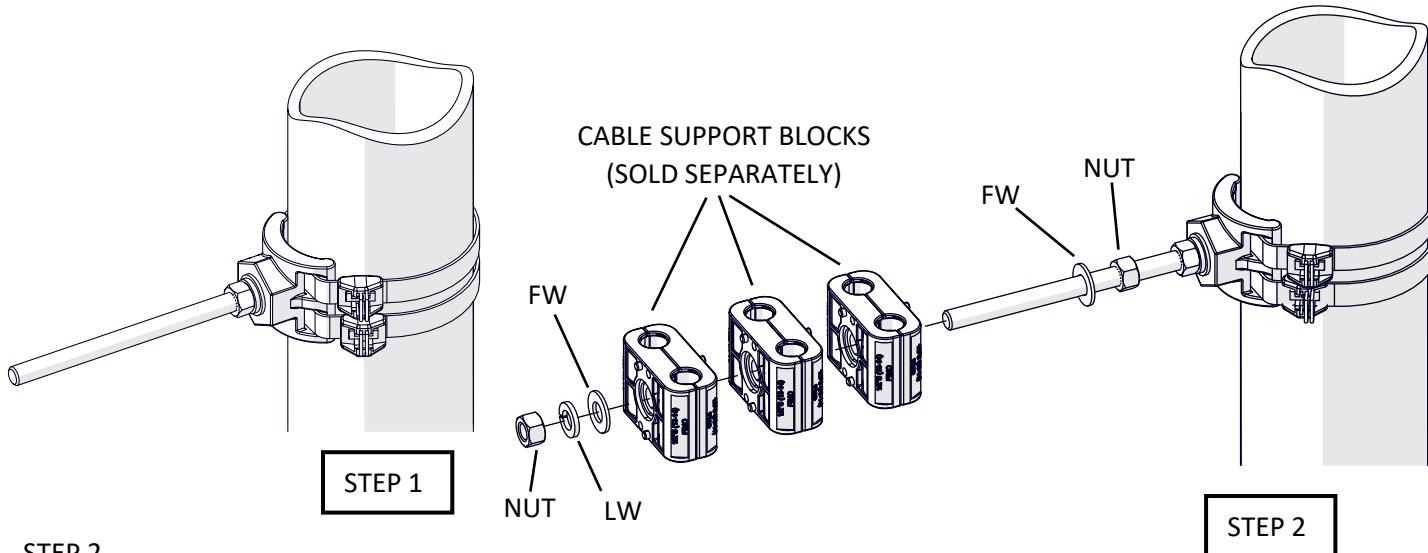
900212-10: PIM Shield Threaded Rod Kit, 3/8" x 8" Lg (Sold in packages of 10)

June 2022

STEP 1

Attach Threaded Rod to 900209-10: PIM Shield Cable Support Base (sold separately).

(Refer to instructions included with 900209-10 for this step)

STEP 2

Install Nut and Washers, then attach Cable Support Block(s) (sold separately) with hardware as shown.
 (Torque hardware to 10 Ft-lb, ConcealFab Tool PN: 900053) (Note: Spare washer supplied with kit)

900212 INSTALLATION INSTRUCTIONS

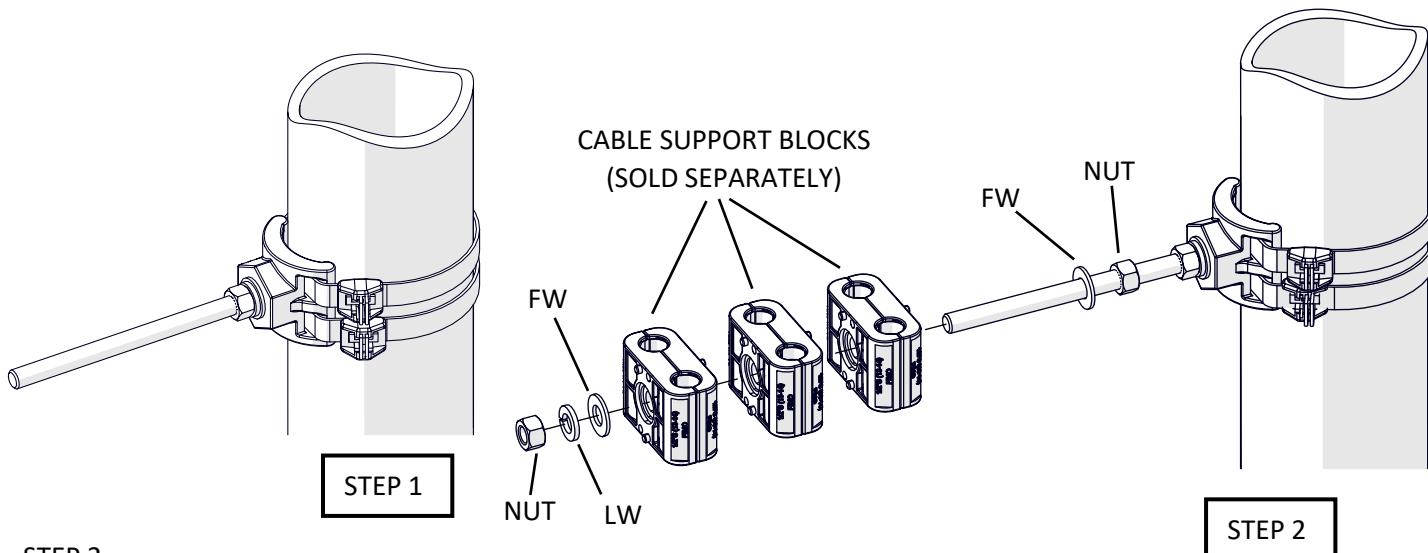
900212-10: PIM Shield Threaded Rod Kit, 3/8" x 8" Lg (Sold in packages of 10)

June 2022

STEP 1

Attach Threaded Rod to 900209-10: PIM Shield Cable Support Base (sold separately).

(Refer to instructions included with 900209-10 for this step)

STEP 2

Install Nut and Washers, then attach Cable Support Block(s) (sold separately) with hardware as shown.
 (Torque hardware to 10 Ft-lb, ConcealFab Tool PN: 900053) (Note: Spare washer supplied with kit)