

Installation Instructions

900352-01 – PIM Cable Support Bar, Pole Mount Kit, 13 Position

900352-02 – PIM Cable Support Bar, Pole Mount Kit, 13 Position, Extended Range

STEP 1

Attach threaded rods to bracket, set to correct offset length. (Torque greater than 20 Ft-lb)


STEP 2

Attach saddle brackets to pole.


STEP 3

Attach 13 Position Bar to threaded rods.


Torque: 20 Ft-lb all connections
 (ConcealFab Tool PN: 900413)

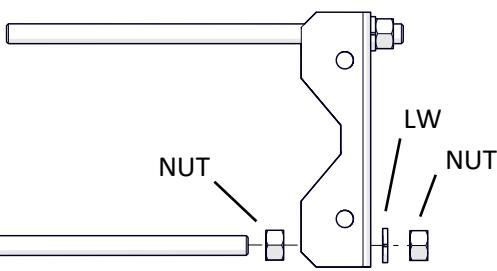

STEP 1

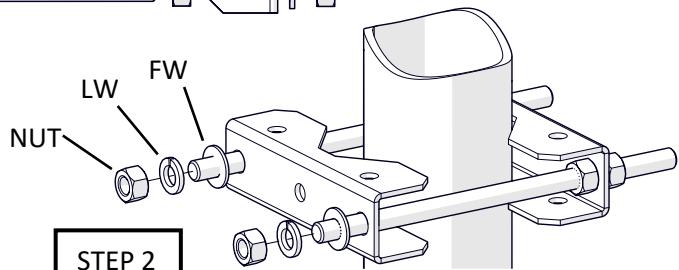

STEP 2

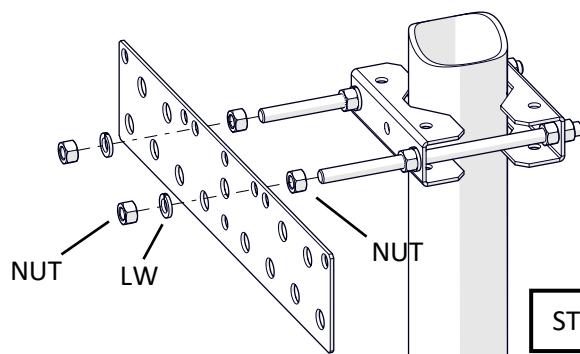

STEP 3

900352 INSTALLATION INSTRUCTIONS

Installation Instructions

900352-01 – PIM Cable Support Bar, Pole Mount Kit, 13 Position

900352-02 – PIM Cable Support Bar, Pole Mount Kit, 13 Position, Extended Range

STEP 1

Attach threaded rods to bracket, set to correct offset length. (Torque greater than 20 Ft-lb)


STEP 2

Attach saddle brackets to pole.


STEP 3

Attach 13 Position Bar to threaded rods.


Torque: 20 Ft-lb all connections
 (ConcealFab Tool PN: 900413)

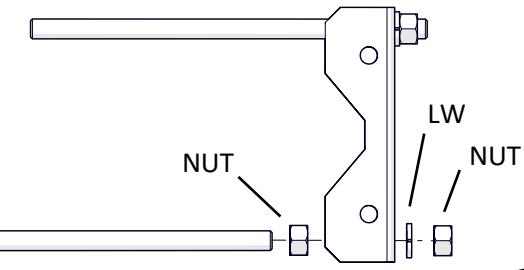

STEP 1

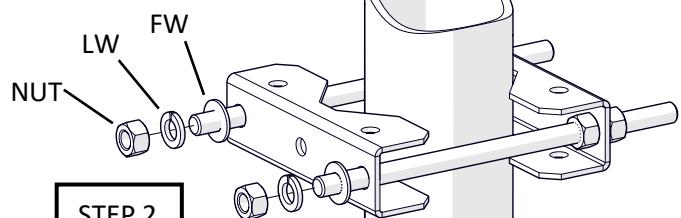

STEP 2

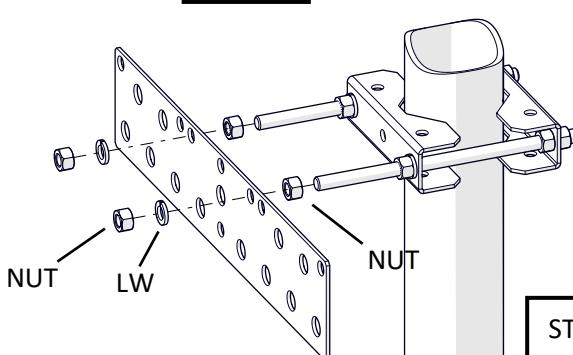

STEP 3