

## Installation Instructions

900354 – PIM Cable Support Bar, Extra Bar Kit, 13 Position


### STEP 1

Install Pole Mount Kit (not included) in accordance with 900352 or 900353 instructions. Be sure to leave a minimum of 1.4 inches of threaded rod extending from saddle bracket nut. (Torque greater than 20 Ft-lb)

### STEP 2

Install Extra Bar Kit to threaded rods.

Torque: 20 Ft-lb all connections  
 (ConcealFab Tool PN: 900413)

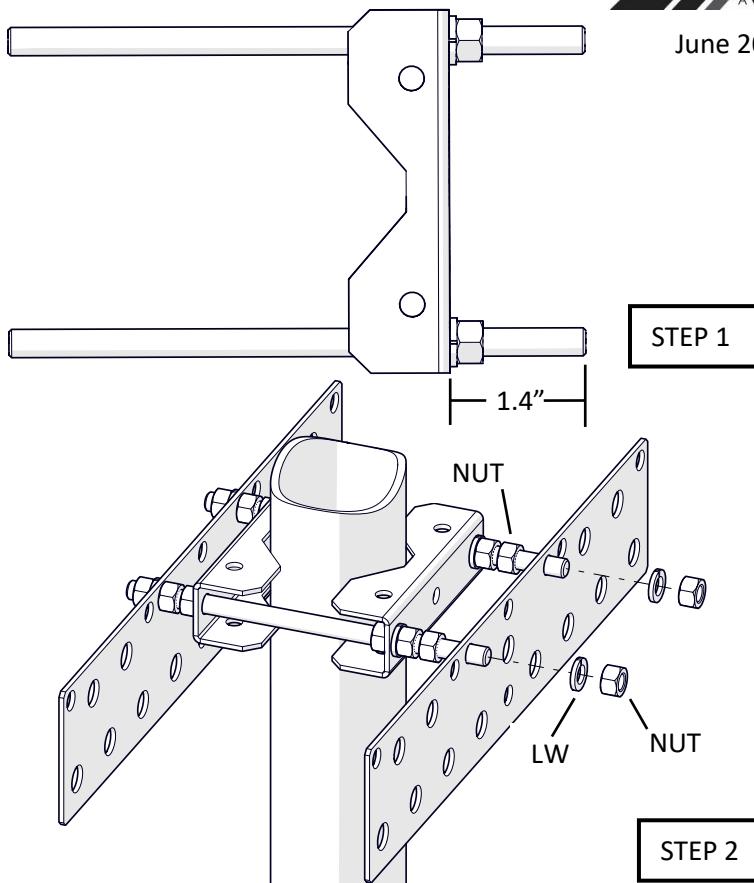

## Installation Instructions

900354 – PIM Cable Support Bar, Extra Bar Kit, 13 Position

### STEP 1

Install Pole Mount Kit (not included) in accordance with 900352 or 900353 instructions. Be sure to leave a minimum of 1.4 inches of threaded rod extending from saddle bracket nut. (Torque greater than 20 Ft-lb)

### STEP 2

Install Extra Bar Kit to threaded rods.

Torque: 20 Ft-lb all connections  
 (ConcealFab Tool PN: 900413)

