

Installation Instructions

900362 – PIM Shield Channel Runner Kit,
3/8, SS

STEP 1

Insert SS channel runner kit into rail.

STEP 2

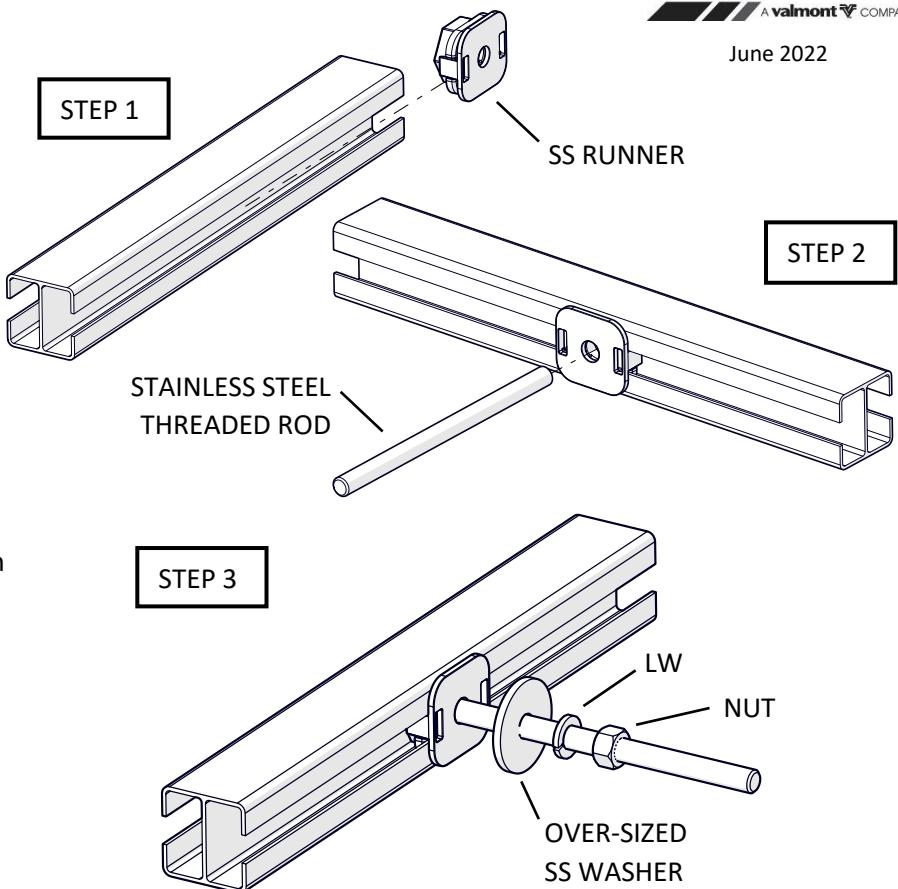
Screw 3/8" SS threaded rod into channel runner kit until it bottoms out.

STEP 3

Position threaded rod to desired location on rail and install over-sized SS washer, lock washer and nut onto threaded rod.

Torque: 10 Ft-lb

(ConcealFab Tool PN: 900053)


Installation Instructions

900362 – PIM Shield Channel Runner Kit,
3/8, SS

STEP 1

Insert SS channel runner kit into rail.

STEP 2

Screw 3/8" SS threaded rod into channel runner kit until it bottoms out.

STEP 3

Position threaded rod to desired location on rail and install over-sized SS washer, lock washer and nut onto threaded rod.

Torque: 10 Ft-lb

(ConcealFab Tool PN: 900053)

