

900940-10: PIM Shield Universal Base, Angle Adapter, 3/8" (Sold in packages of 10)


June 2022

The angle adapter can be used by itself to secure cable bundles or can be used with 900712-10 or 900713-10 adapters to secure cable support blocks or snap-in cable hangers.


Cable Bundles

STEP 1
 CABLE STRAPS
 900443-16-50
 900443-27-25


Pass appropriate length of PIM Shield Cable Straps through Universal Base, around angle, and back through Locking Head.

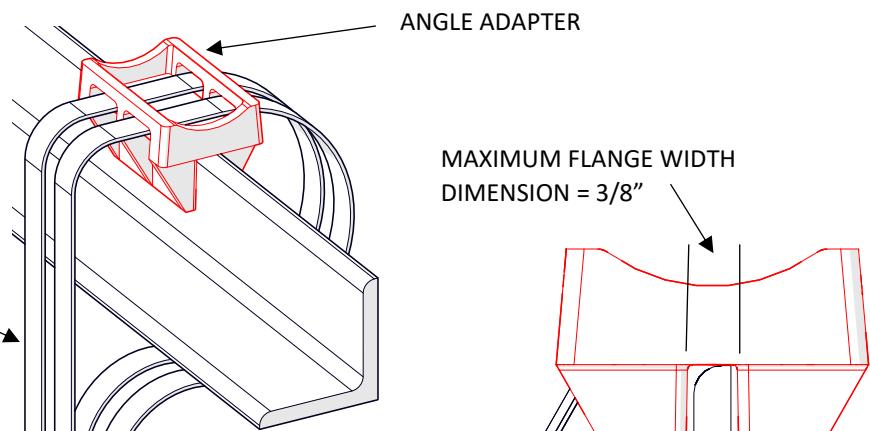


STEP 2
 Use Cable Strap installation tool (900442 or equivalent) to tighten cable strap in position shown and flush cut tail to Locking Head.

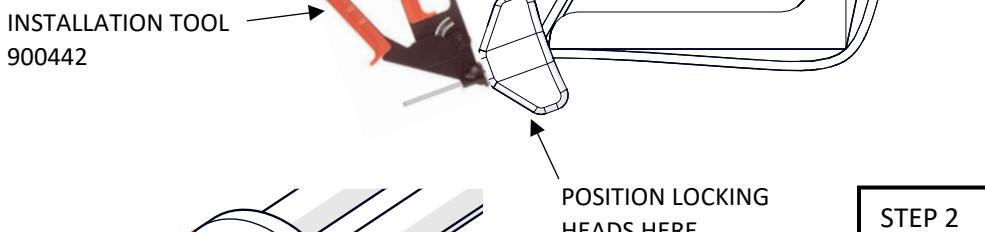

STEP 3
 Pass Cable Straps (900443-16-50) through Universal Base, around cable bushing/bundle, and back through Locking Head.

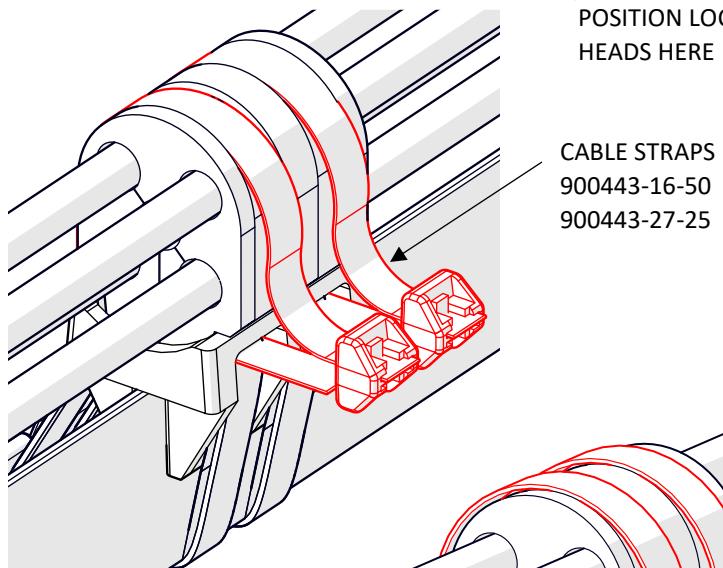


STEP 4
 Use Cable Strap installation tool (900442 or equivalent) to tighten cable straps in position shown and flush cut to Locking Head.

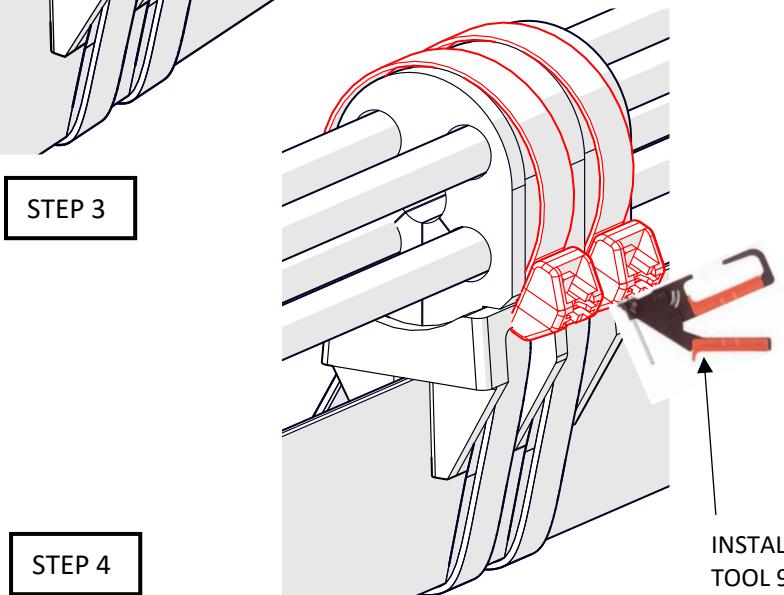**Adapters** (see reverse)**STEP 4**

Adapters


STEP 1

Install Adapter (900712-10 or 900713-10) into Universal Base.

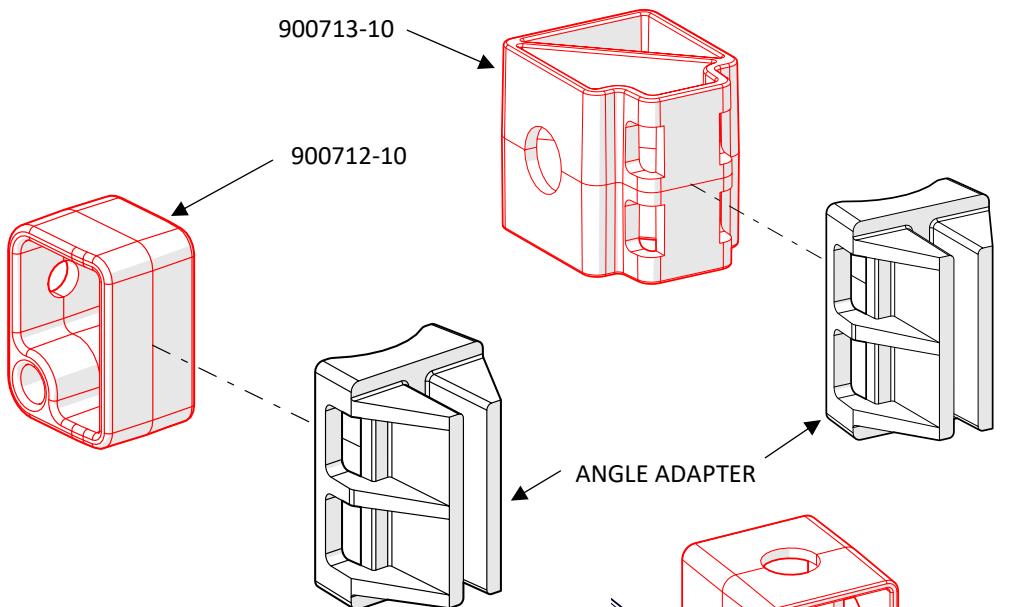

STEP 2

Pass Cable Straps (900443-16-50) through Adapter and Universal Base, around angle, and back through Locking Head.

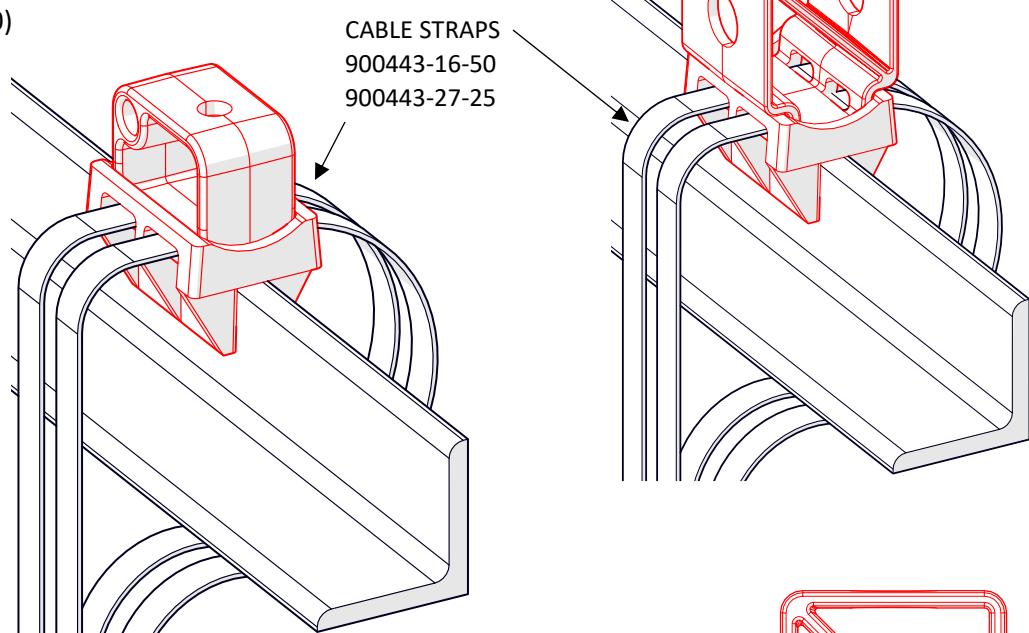

STEP 3

Use Cable Strap installation tool (900442 or equivalent) to tighten cable straps in position shown and flush cut to Locking Head.

