



STEP 1: Secure Snap-in Support Base to a round or angle member using Cable Strap(s) (PN's: 900443-16-50 or 900443-27-25). Use Strap Tensioning tool (900442 or equivalent) to tighten Cable Strap(s). Trim Strap(s) flush to Locking Head.

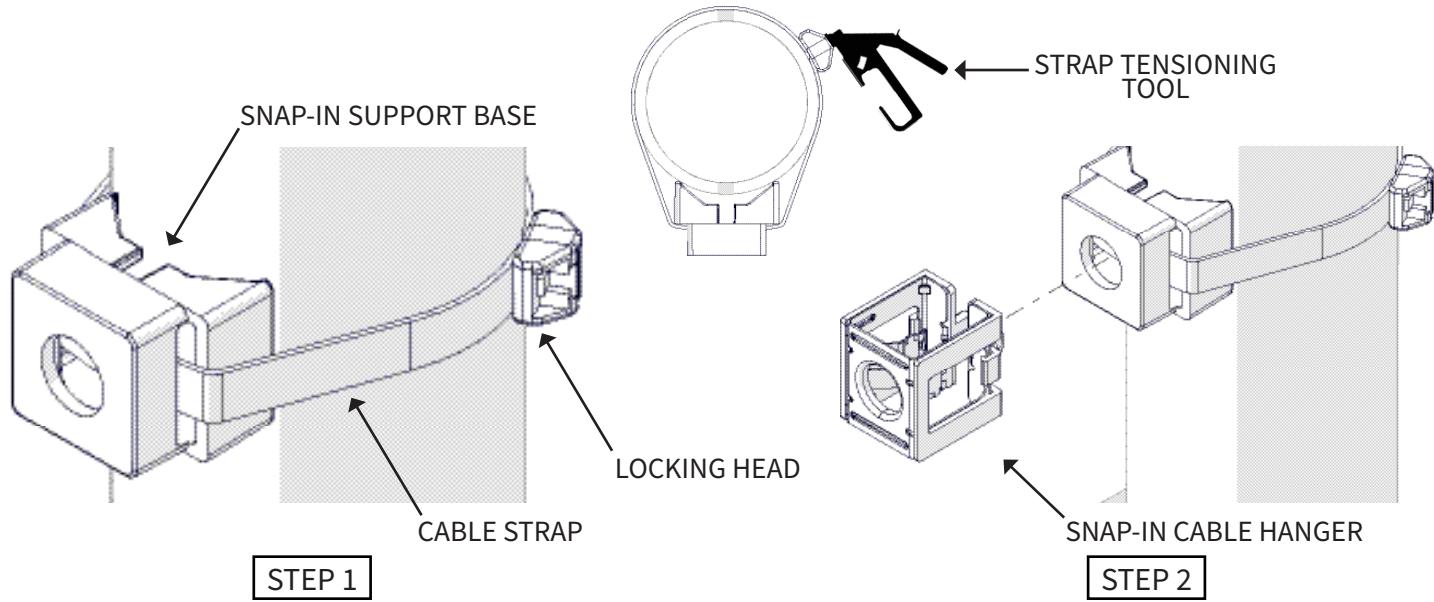

STEP 2: Install low PIM stackable Snap-in Cable Hangers (sold separately, PN's: PSHS-xxxx-10 or PSPS-xxx-10) as required into mounting hole provided. Maximum stack height = 3.

STEP 1: Secure Snap-in Support Base to a round or angle member using Cable Strap(s) (PN's: 900443-16-50 or 900443-27-25). Use Strap Tensioning tool (900442 or equivalent) to tighten Cable Strap(s). Trim Strap(s) flush to Locking Head.

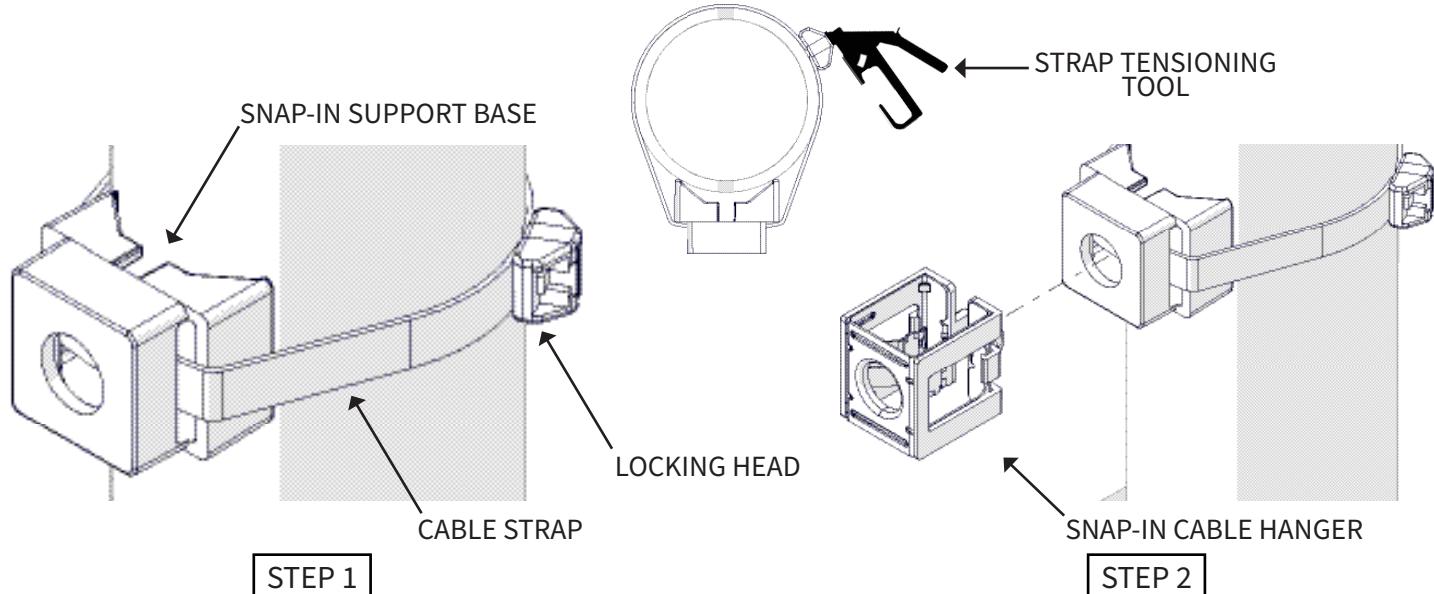

STEP 2: Install low PIM stackable Snap-in Cable Hangers (sold separately, PN's: PSHS-xxxx-10 or PSPS-xxx-10) as required into mounting hole provided. Maximum stack height = 3.