



901738-10 **PIM Shield Button, Qty 10**

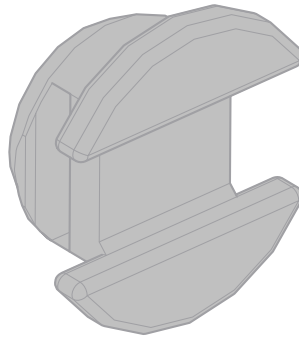

SPECIFICATIONS

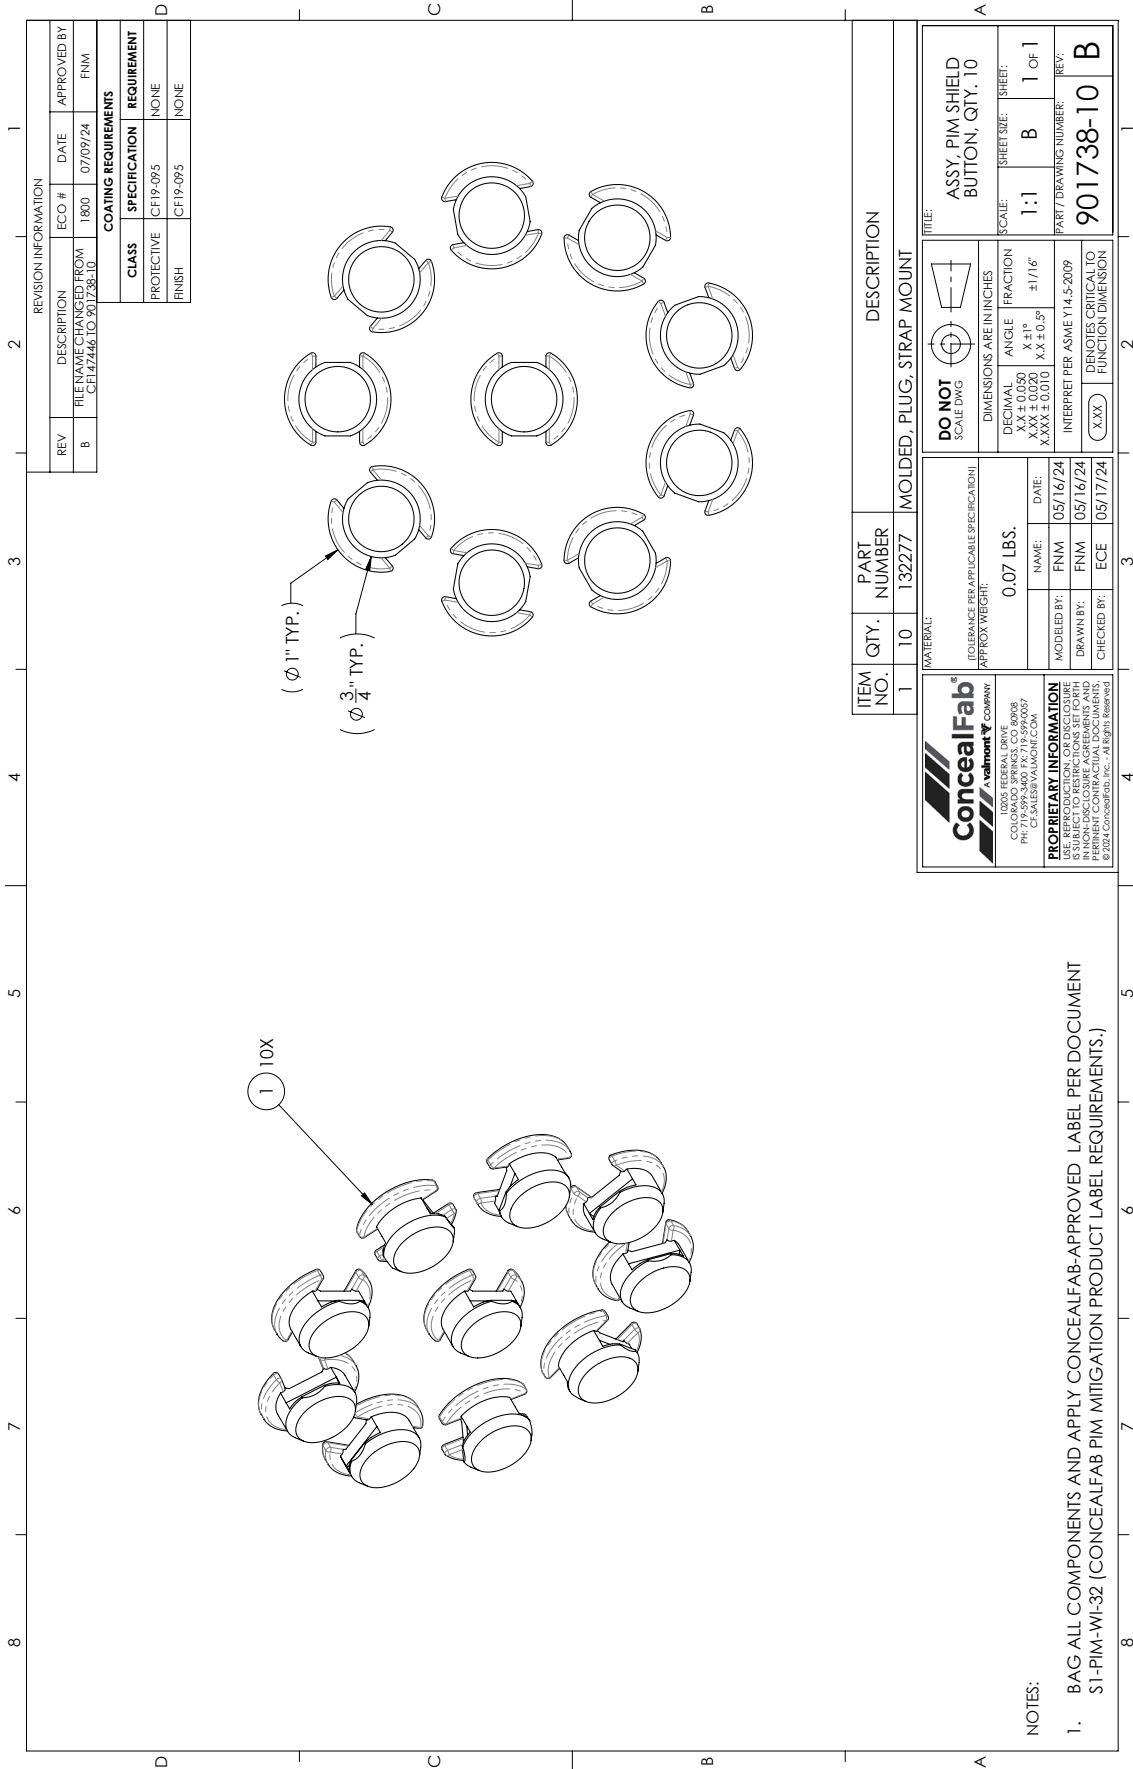


PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION



concealfab.com/products


- These guidelines are provided in good faith to help prevent any problems caused by errors in installation. They are intended to be strictly recommendations and are not to serve as a step-by-step, fail-safe installation checklist.
- Selection of an experienced installer is the sole responsibility of the project owner and architect.
- **ConcealFab shall not be** held responsible for installation actions taken or not taken. There are many details of installation that are assumed to be general construction knowledge to experienced installers; which are not included in these instructions.
- **ConcealFab does not accept** any responsibility for job failure resulting from or associated with improper site environmental conditions and other installation failures.

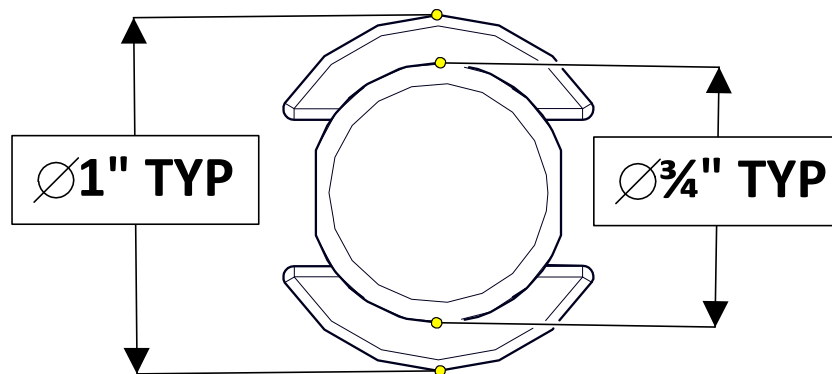

ID	Qty	Description	Part No.
A	10	PIM SHIELD BUTTON	132277

ASSEMBLY

STEP 1: Install **PIM Shield Button (Item A)** to **rear side of PIM Shield Cable Support Bar (SN: 900352, 900354, 901166; Sold Separately)** as shown. It can also be used in any standard 3/4" diameter snap-in hole.

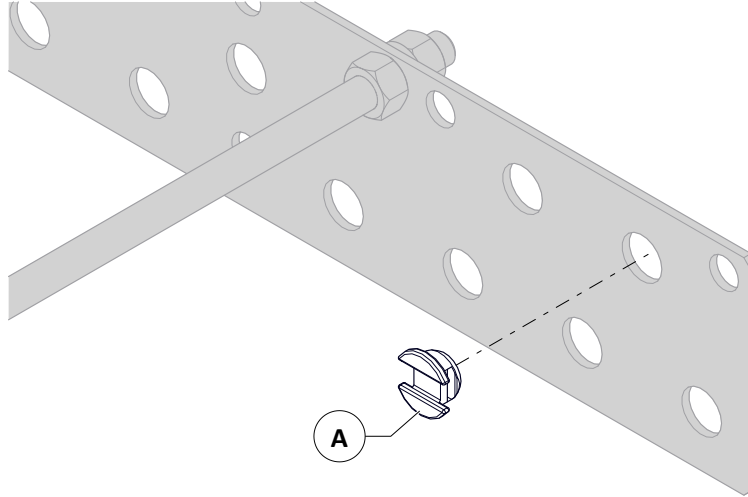

ID	Qty	Description	Part No.
A	1	PIM SHIELD BUTTON	132277

STEP 2: Install **PIM Shield Cable Straps (900443-16-50/-27-25; Sold Separately)** through **PIM Shield Button (Item A)** and secure to **Cables (By others)**.

