

901932 INSTALLATION INSTRUCTIONS




May 2025

Installation Instructions

901932 - PIM Shield Polymer Cable Support, Extra Bar Kit, 13 Position

STEP 1

Install Pole Mount Kit (not included) in accordance with its installation instructions. Be sure to leave a minimum of 1.4 inches of threaded rod protruding from the saddle bracket.
(Torque hardware greater than 20 Ft-lb)

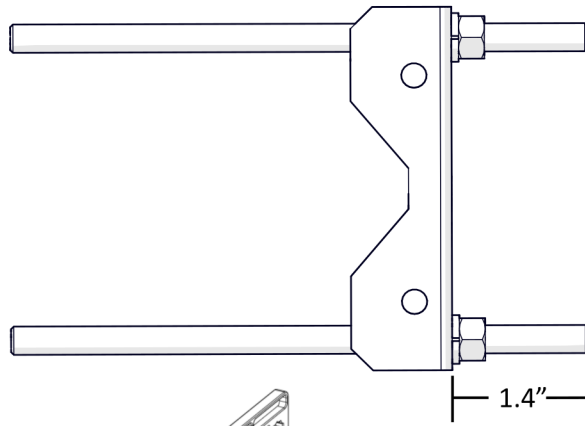


STEP 1

STEP 2

Install Extra Bar Kit to threaded rods.

Torque: 20 Ft-lb all connections
(ConcealFab Tool PN: 900413)

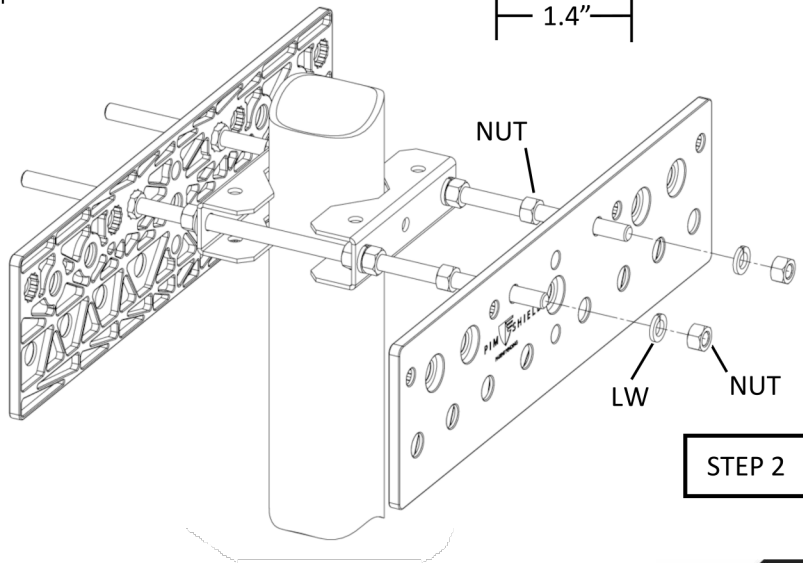

STEP 2

901932 INSTALLATION INSTRUCTIONS




May 2025

Installation Instructions

901932 - PIM Shield Polymer Cable Support, Extra Bar Kit, 13 Position

STEP 1

Install Pole Mount Kit (not included) in accordance with its installation instructions. Be sure to leave a minimum of 1.4 inches of threaded rod protruding from the saddle bracket.
(Torque hardware greater than 20 Ft-lb)

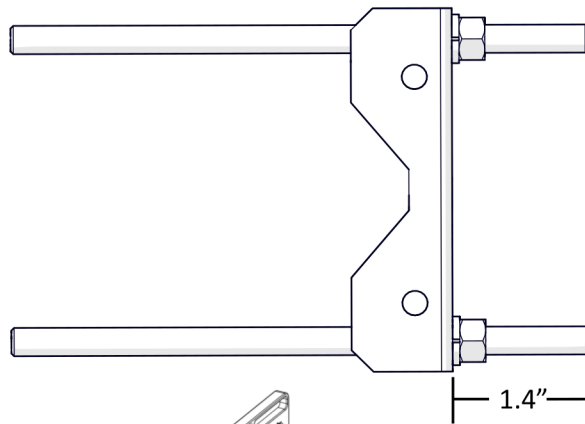


STEP 1

STEP 2

Install Extra Bar Kit to threaded rods.

Torque: 20 Ft-lb all connections
(ConcealFab Tool PN: 900413)

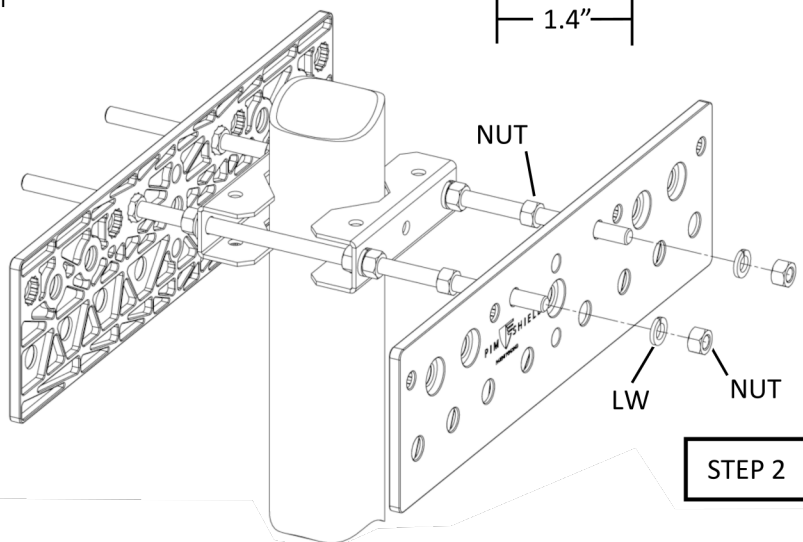

STEP 2