

902053 INSTALLATION INSTRUCTIONS

April 2026

Installation Instructions

902053-01 - PIM Shield Polymer Cable Support Bar, Polymer Pole Mount Kit, 13 Position

902053-02 - PIM Shield Polymer Cable Support Bar, Polymer Pole Mount Kit, 13 Position, Extended Range

STEP 1

Attach threaded rods to clamp brackets, and clamp to pole. Set to correct offset length.

Torque to 4Ft-lb.


STEP 2

Fasten jam nuts against the nuts at all four corners of the pole clamps. (Using two wrenches, hold the nuts fastening the clamps still and tighten the jam nuts into them.)

STEP 3

Attach 13 Position Bar to threaded rods.

Torque to 20Ft-lb

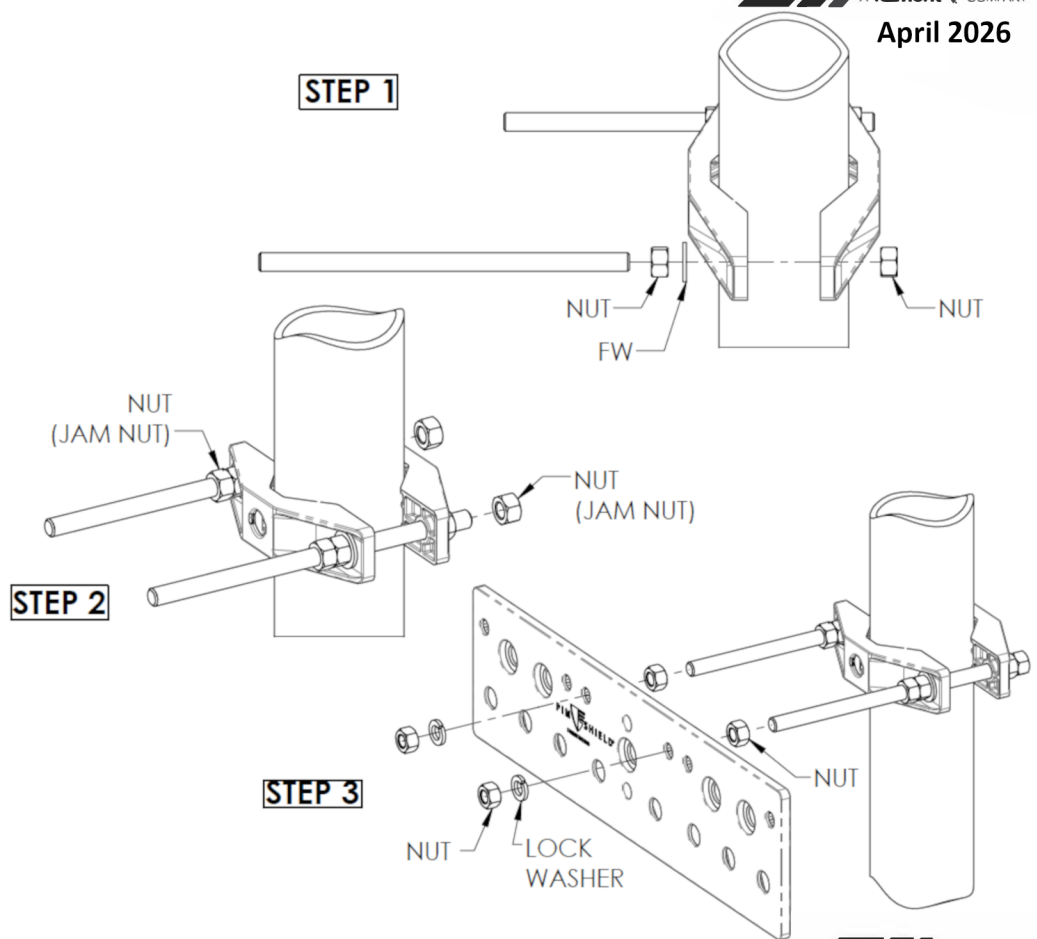

902053 INSTALLATION INSTRUCTIONS

April 2026

Installation Instructions

902053-01 - PIM Shield Polymer Cable Support Bar, Polymer Pole Mount Kit, 13 Position

902053-02 - PIM Shield Polymer Cable Support Bar, Polymer Pole Mount Kit, 13 Position, Extended Range

STEP 1

Attach threaded rods to clamp brackets, and clamp to pole. Set to correct offset length.

Torque to 4Ft-lb.

STEP 2

Fasten jam nuts against the nuts at all four corners of the pole clamps. (Using two wrenches, hold the nuts fastening the clamps still and tighten the jam nuts into them.)

STEP 3

Attach 13 Position Bar to threaded rods.

Torque to 20Ft-lb

