

Installation Instructions

901933-01 - PIM Shield Polymer Cable Support Bar, Pole Mount Hybrid Kit 13 Position

901933-02 - PIM Shield Polymer Cable Support Bar, Pole Mount Hybrid Kit, 13 Position, Extended Range

STEP 1

Attach threaded rods to bracket, set to correct offset length. (Torque greater than 20 Ft-lb)


STEP 2

Attach saddle brackets to pole.

STEP 3

Attach 13 Position Bar to threaded rods.

Torque: 20 Ft-lb all connections
(ConcealFab Tool PN: 900413)

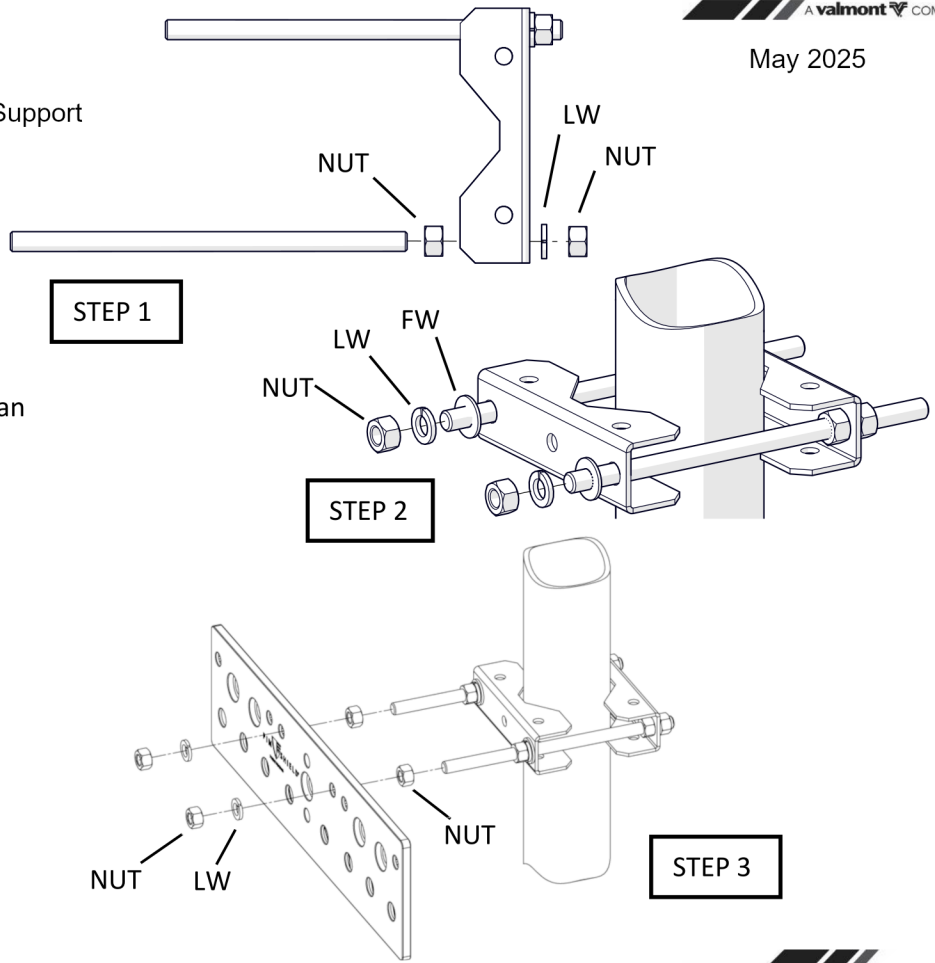

Installation Instructions

901933-01 - PIM Shield Polymer Cable Support Bar, Pole Mount Hybrid Kit 13 Position

901933-02 - PIM Shield Polymer Cable Support Bar, Pole Mount Hybrid Kit, 13 Position, Extended Range

STEP 1

Attach threaded rods to bracket, set to correct offset length. (Torque greater than 20 Ft-lb)

STEP 2

Attach saddle brackets to pole.

STEP 3

Attach 13 Position Bar to threaded rods.

Torque: 20 Ft-lb all connections
(ConcealFab Tool PN: 900413)

